




1. Připoj nanostation pres UTP
2. Výchozí adresu 192.168.1.254 255.255.255.0. Default heslo „admin“  
„admin“
3. Operation Mode AP client Router

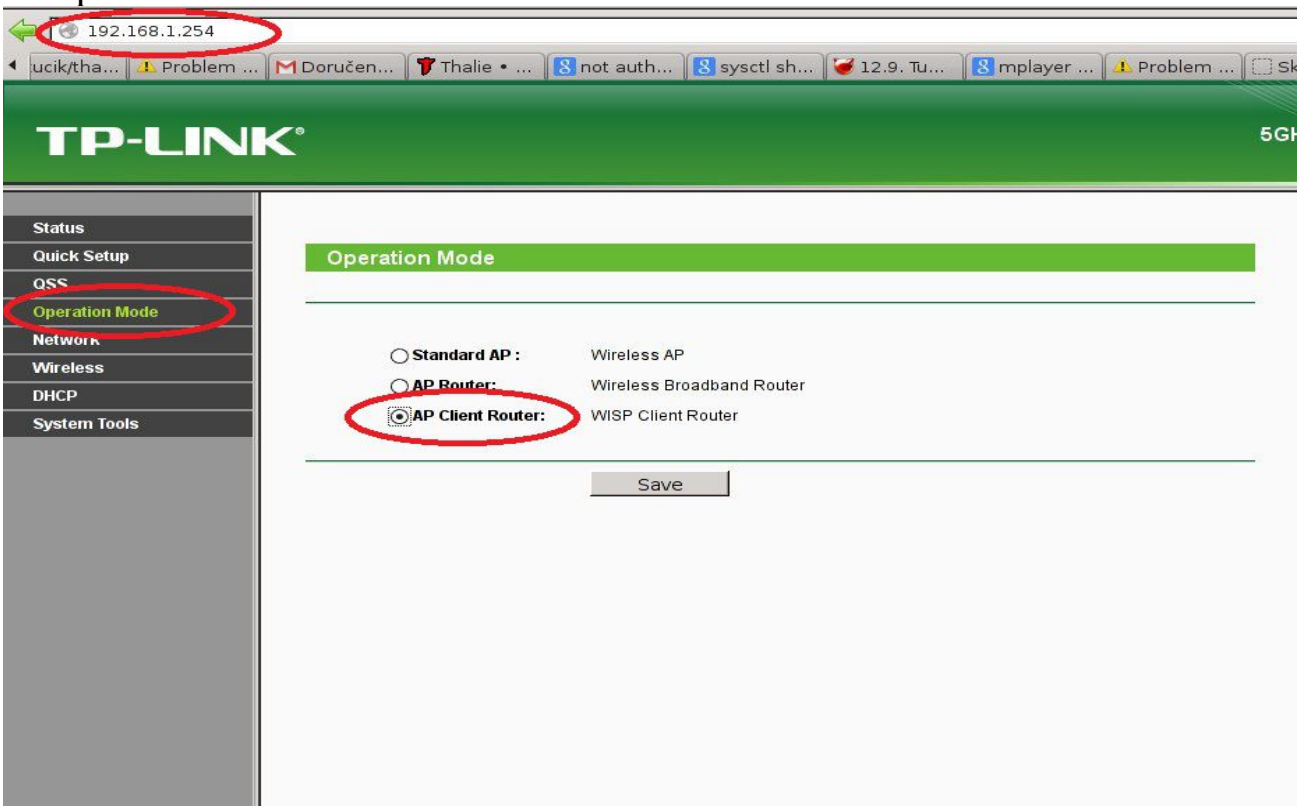


4. Nastavit dynamic IP a hostname

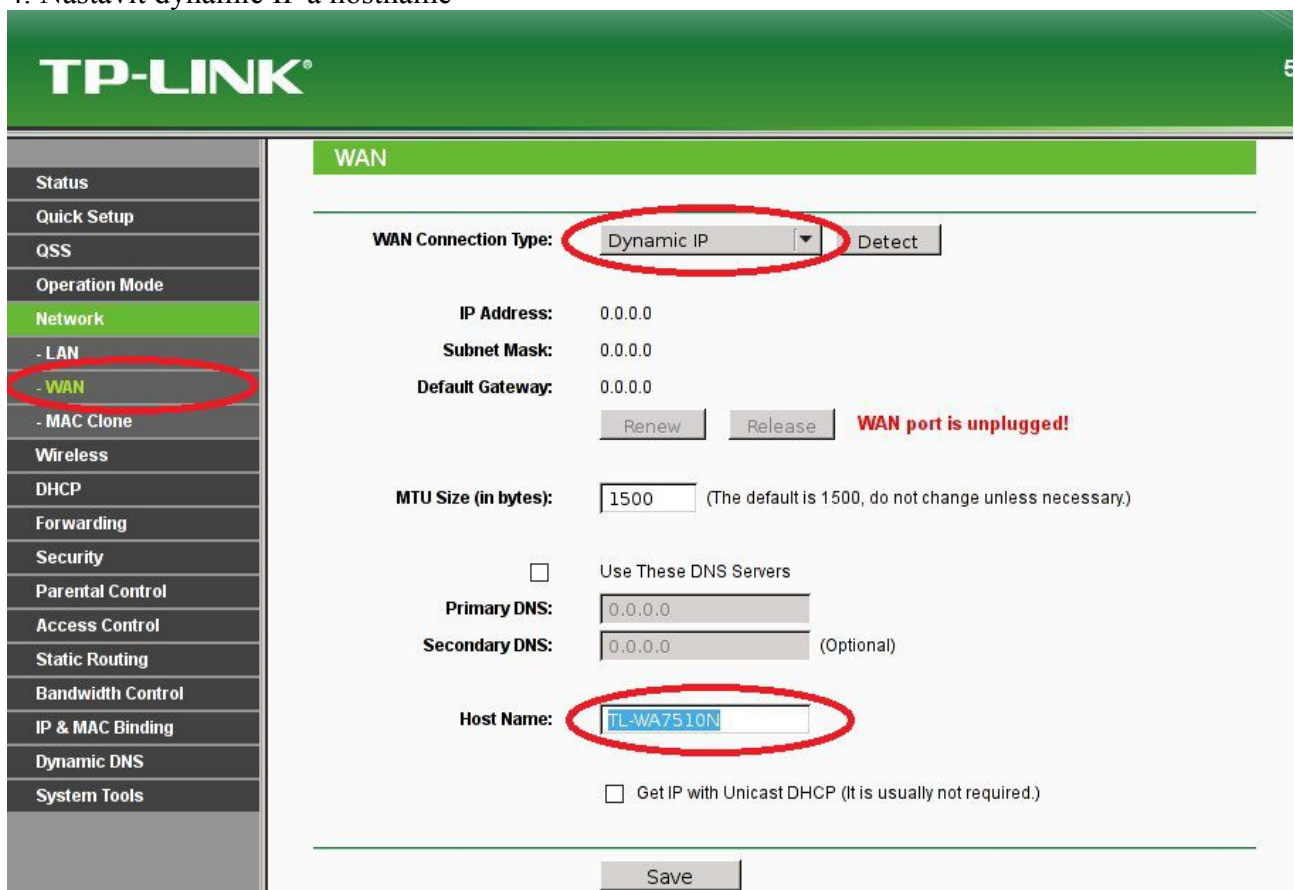

5. Region Czech republic. Nastavit SSID a Mac adresu APcka

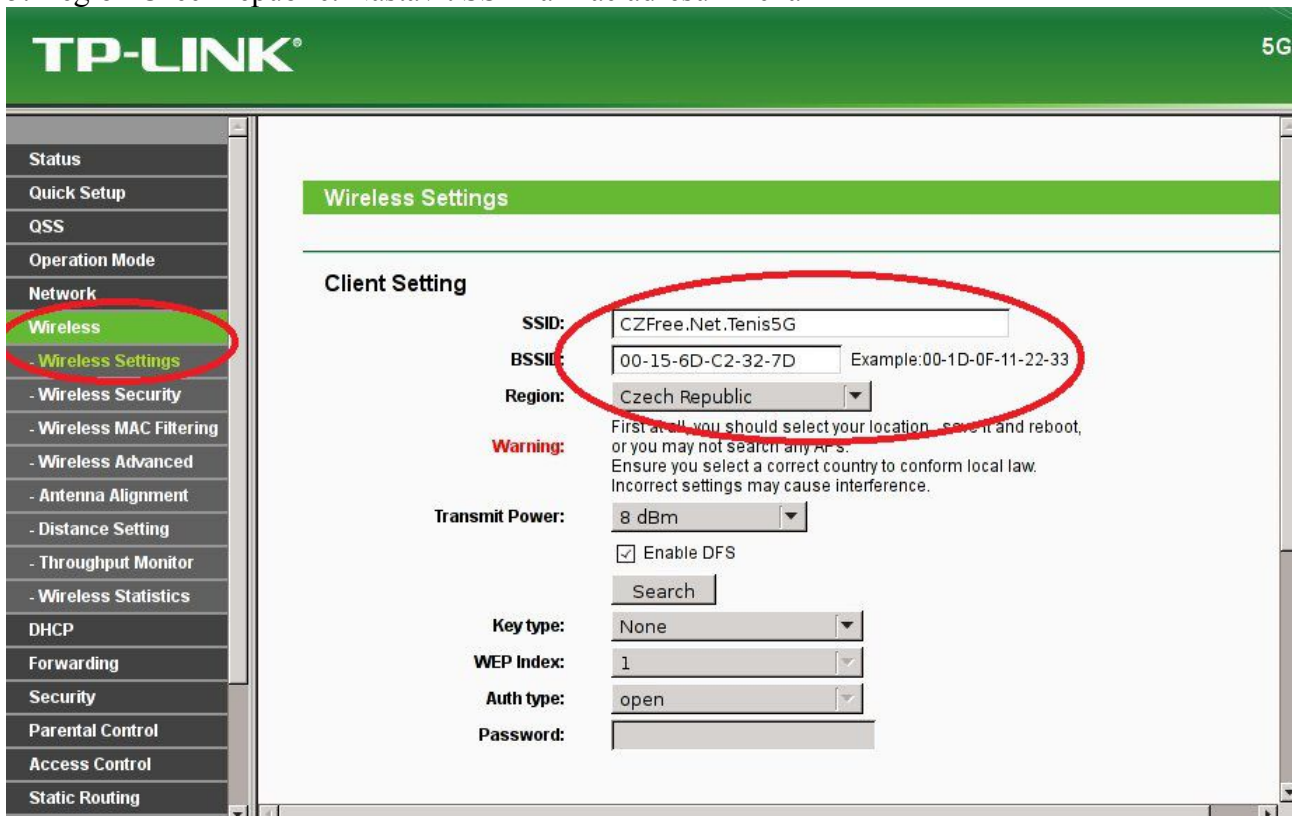

6. Vypnout wireless AP stranu

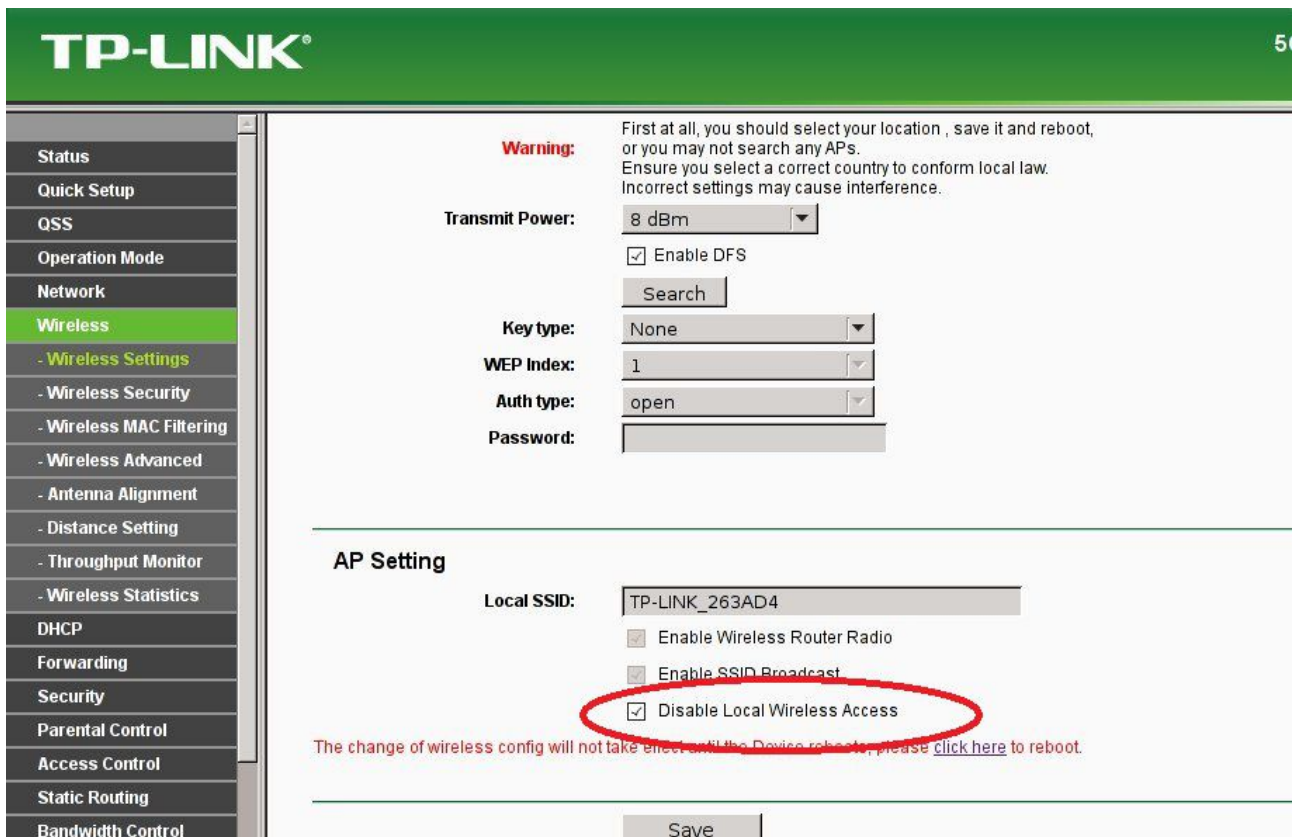

## 7. Nastavit DHCP server

TP-LINK® 5G

Status  
Quick Setup  
QSS  
Operation Mode  
Network  
Wireless  
**DHCP**  
- DHCP Settings  
- DHCP Clients List  
- Address Reservation  
Forwarding  
Security  
Parental Control  
Access Control  
Static Routing

### DHCP Settings

DHCP Server:  Disable  Enable

Start IP Address:

End IP Address:

Address Lease Time:  minutes (1~2880 minutes, the default value is 120)

Default Gateway:  (optional)

Default Domain:  (optional)

Primary DNS:  (optional)

Secondary DNS:  (optional)

## 8. Otvrit remote management ze site.

TP-LINK® 5G

Status  
Quick Setup  
QSS  
Operation Mode  
Network  
Wireless  
DHCP  
Forwarding  
**Security**  
- Basic Security  
- Advanced Security  
- Local Management  
- Remote Management  
Parental Control

### Remote Management

Web Management Port:

Remote Management IP Address:  (Enter 255.255.255.255 for all)

## 9. Nastavit standardni heslo

TP-LINK® 5G

Operation Mode  
Network  
Wireless  
DHCP  
Forwarding  
Security  
Parental Control  
Access Control  
Static Routing  
Bandwidth Control  
IP & MAC Binding  
Dynamic DNS  
**System Tools**  
- Time Settings  
- Diagnostic  
- Firmware Upgrade  
- Factory Defaults  
- Backup & Restore  
- Reboot  
- Password

### Password

Old User Name:

Old Password:

New User Name:

New Password:

Confirm New Password: